


TERTIAL Door SINGLE/DOUBLE

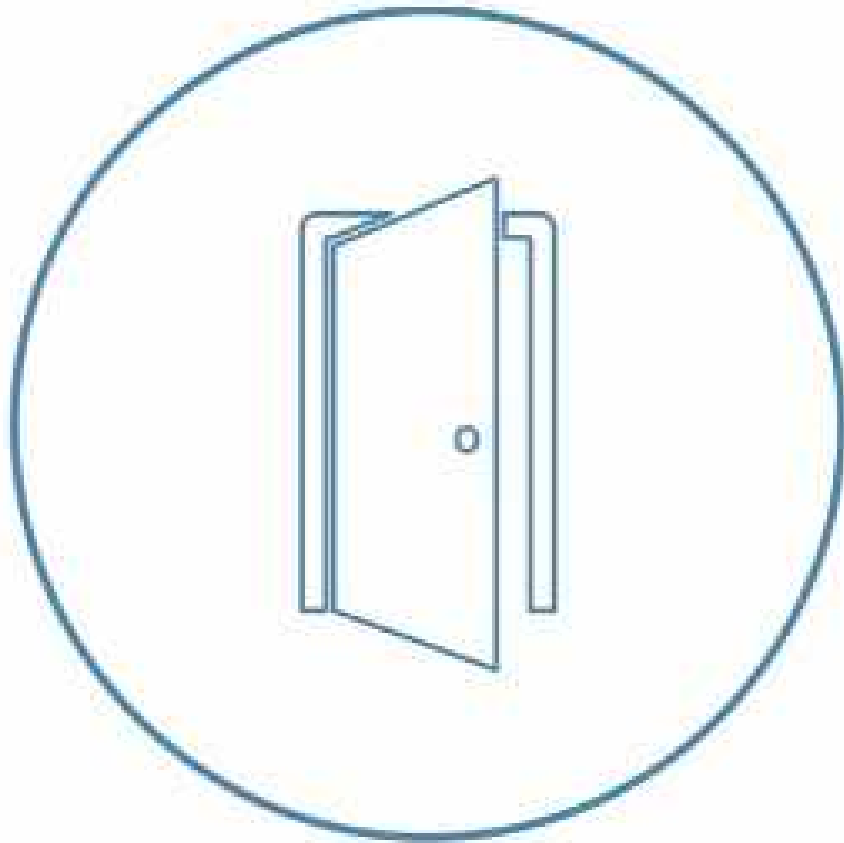

Assembly leaflet

Instructions to be followed to fit our
products correctly

05/2019


Recommended
number of fitters:



Tools:

1 set of suction cups
2 airbags
BTR key

KITAT

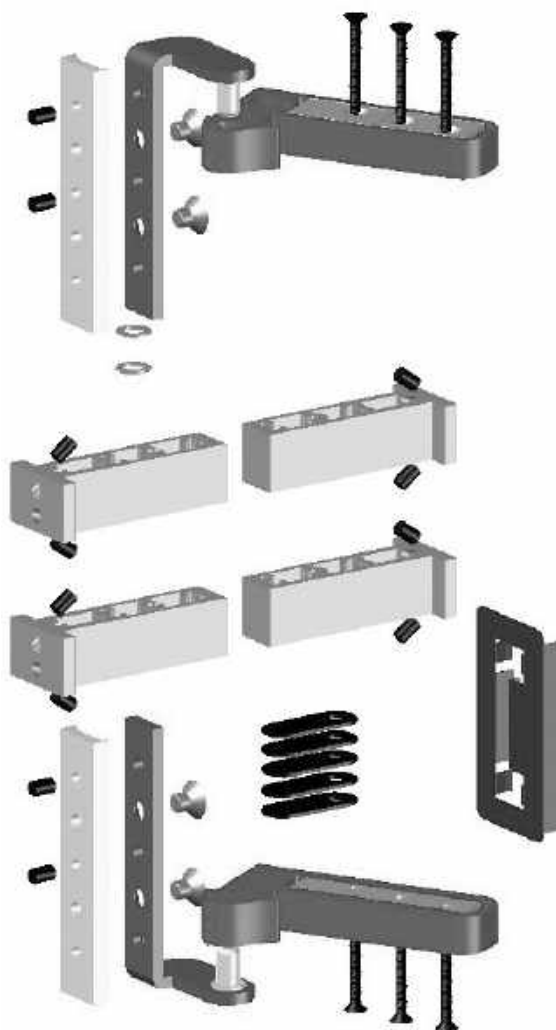

MOUNTING THE TERTIAL DOOR (SINGLE/DOUBLE)

1. Insert the bottom plate in the groove at a slant



2. Tighten the pressure screws gently



3. Fix the pivot hinge on the plate (Allen key)



4. Prepare the levelling pads and the PVC ring



5. Place the ring on the pivot hinge



6. Repeat these steps for the top mount



7. Screw the plate in the groove gently




8. Check the position of the plate by placing the pivot hinge in the groove. Tighten the pressure screws



9. Set the door on the bottom pivot hinge

10. Place the top pivot hinge in the pivot on the door

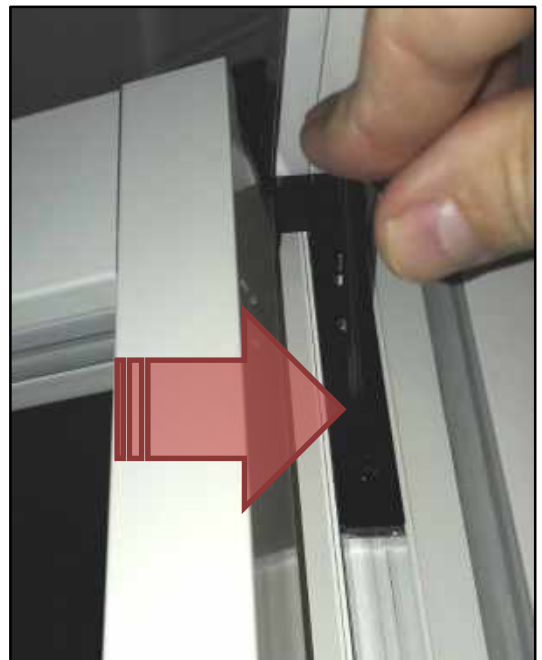

11. Bring the pivot hinge to the top plate

12. Screw the hinge on the plate



13.


IF NECESSARY:

Adjust the vertical gap between the door and the frame at the bottom


14. Do the same at the top IF NECESSARY.



ADJUSTING THE PIVOT ON THE DOOR

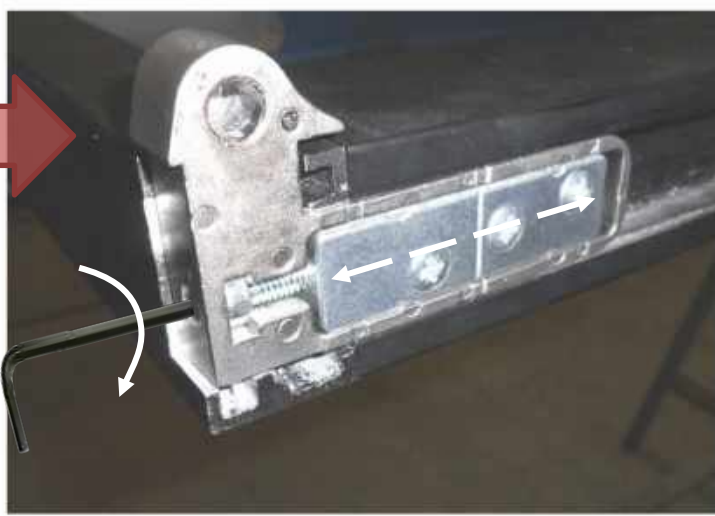


MOUNTING THE LOCK ON THE DOOR

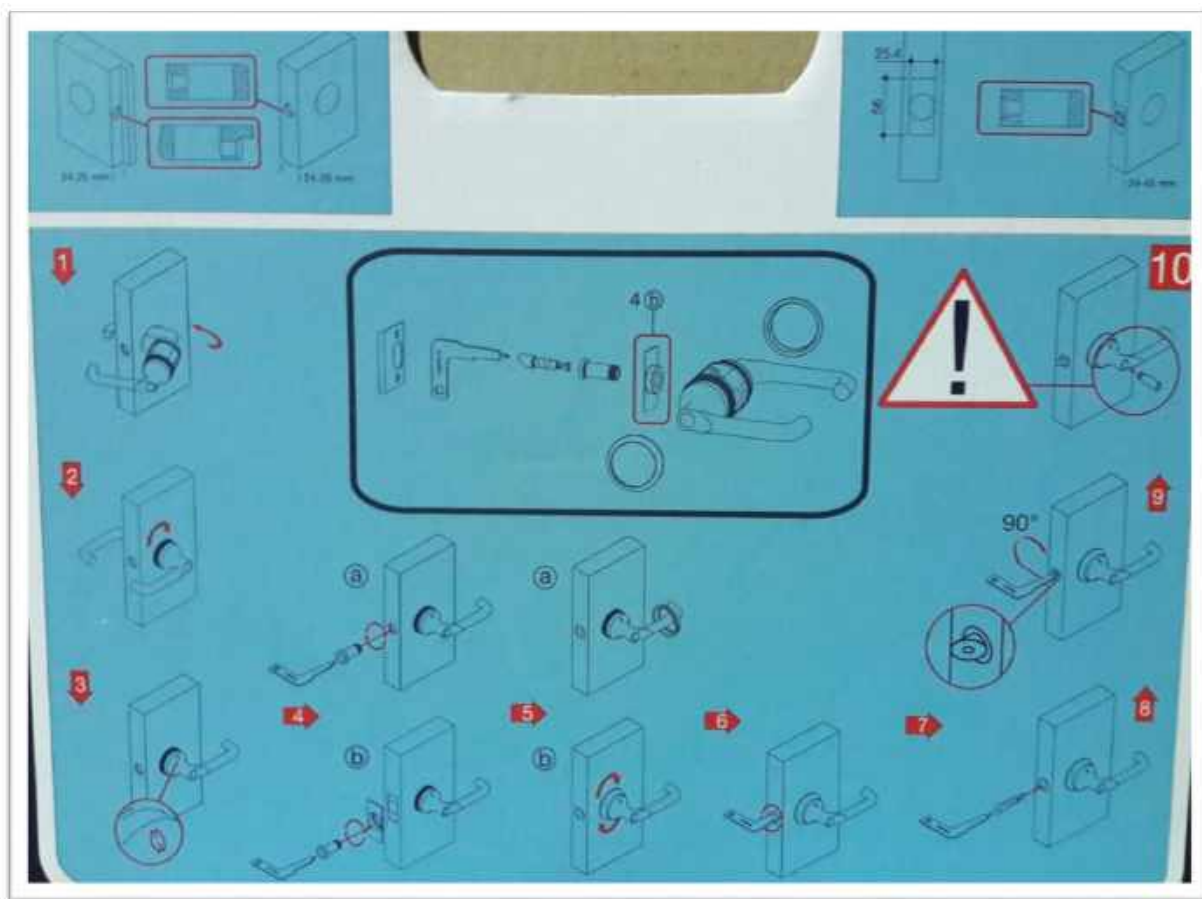

1. To mount the lock:

Refer to the instructions on the HOPPE box

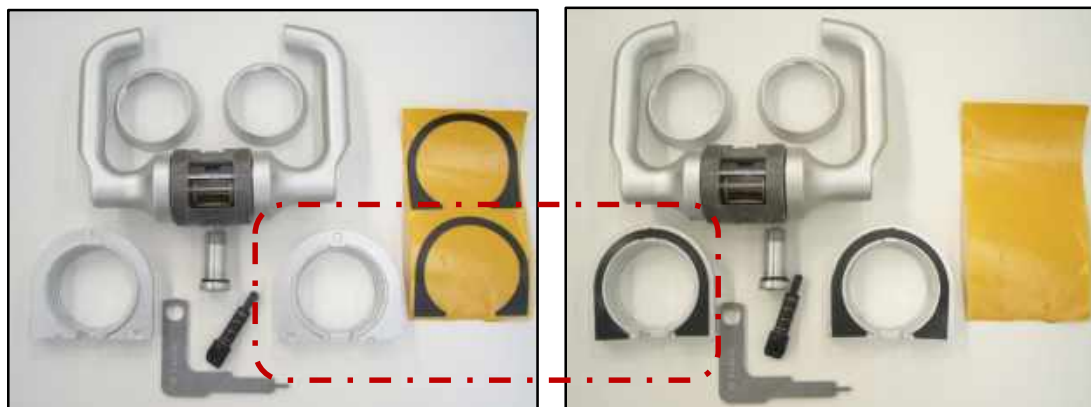


2. Stick the adhesive foam pieces on the lock trims




3. Mount the lock on both sides of the glazing of the door

4. Pre-screw the bolt housing to the body using the key supplied

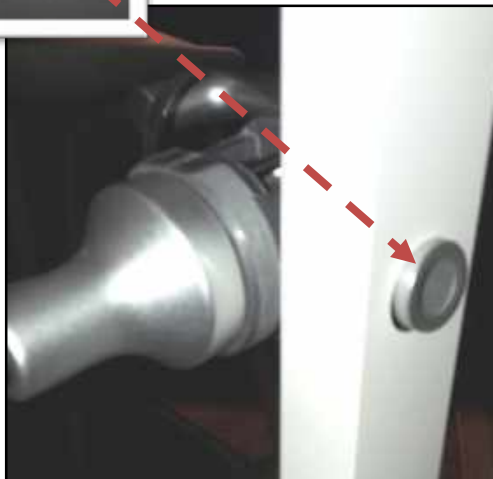

5. Mount the lock trims + roses on the body. Finish screwing the bolt housing (key supplied)

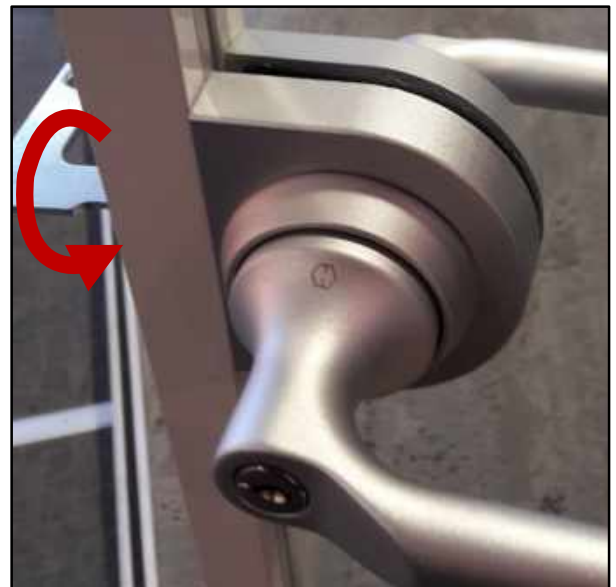

6. Mount the bolt in the housing (key supplied), a ¼ turn is sufficient





HOYEZ SAS
71 rue de Lille
F. 59710 Avelin
T. +33 (0)3 28 55 11 55

hoyez@hoyez.com
www.hoyez.com

