


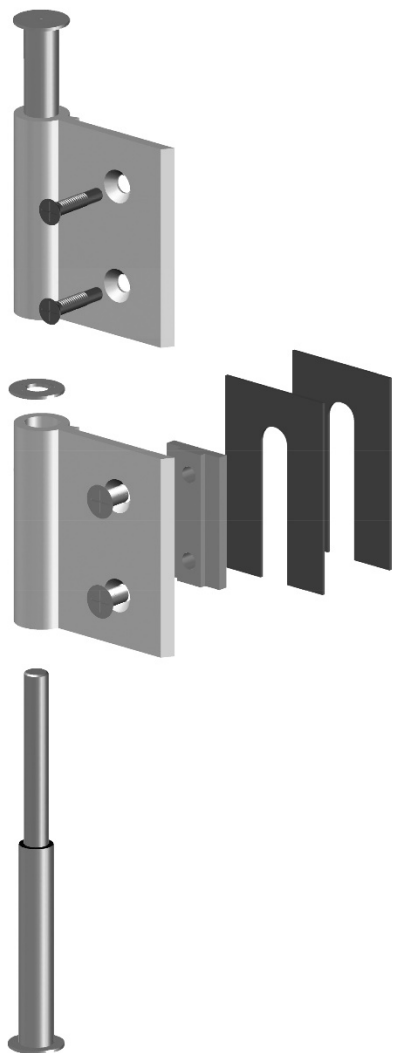

STANDARD HINGES

PAU6O_PAU6OL

FOR SWINGING
DOOR:

H3

Tertial

Lineal

Wood

Assembly notice

Notice to be respected for an assembly in
conformity with our products


03/2020



Number of recommended
fitters : 1



1 meter / 1 screwdriver /
Allen key n°3 / 1 PVC mallet

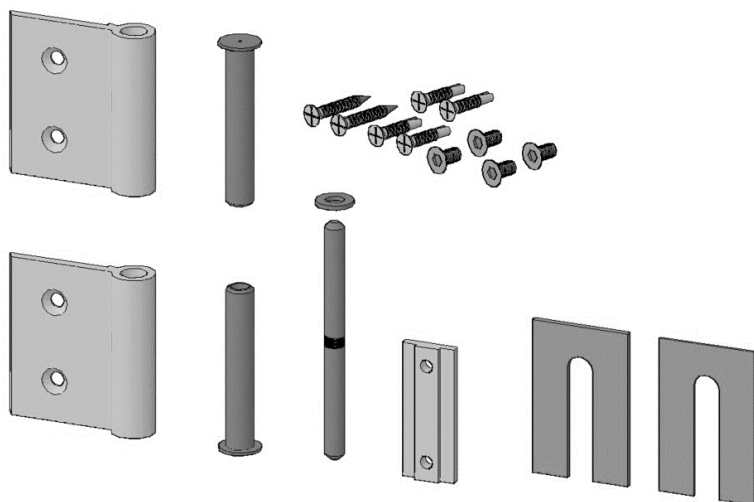

Door : H3, LINEAL, Wood

Number of hinges according to dimensional limits

Nb hinges	Door dimensions (mm)
4	W. $\leq$ 930 H. $\leq$ 2440
5	W. $\leq$ 930 H. $\leq$ 2950
5	W. $\leq$ 1030 H. $\leq$ 2740
6	W. $\leq$ 1030 H. $\leq$ 2950

Door : TERTIAL

Number of hinges according to dimensional limits

Nb hinges	Door dimensions (mm)
4	W. $\leq$ 930 H. $\leq$ 2950
4	W. $\leq$ 1030 H. $\leq$ 2550
5	W. $\leq$ 1030 H. $\leq$ 2950


Door : H3, LINEAL, Wood

Door : TERTIAL

6 HINGES


5 HINGES

4 HINGES

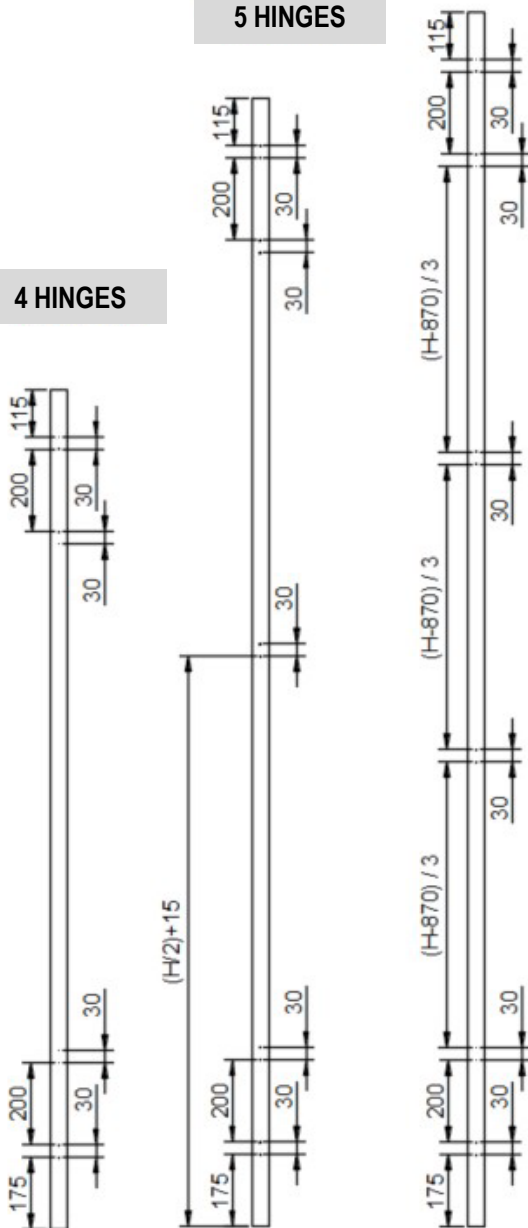

4 HINGES

5 HINGES

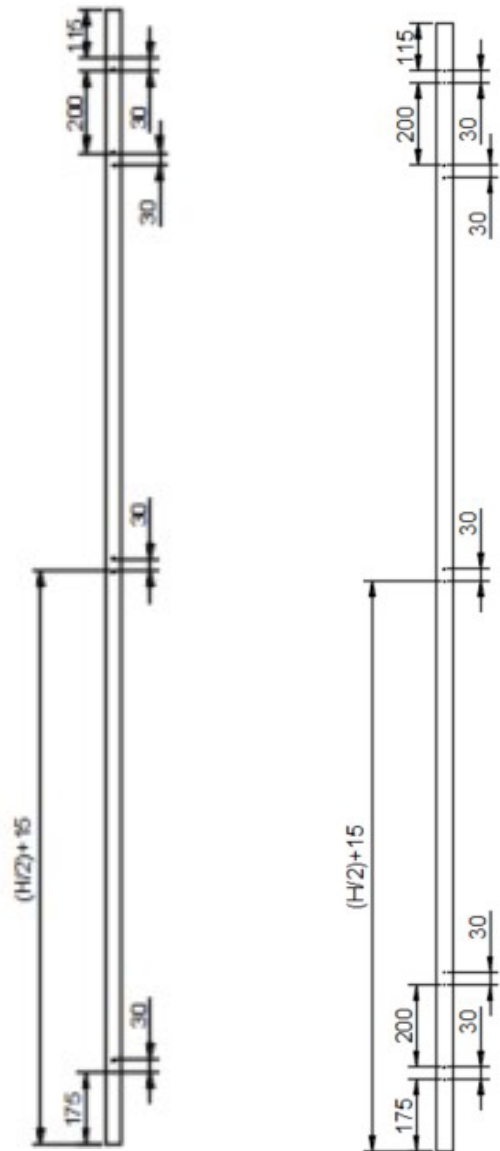

Tertial and Lineal doors: factory pre-drilling done


Wood and H3 doors: drill in the axis of the door thickness (pre-drill advice: diameter 3.5 mm)





Locate the bottom hinge:
it has 3 holes instead of 2 !!

Hinge assembly according to the direction of the door

DOOR RIGHT PUSHING

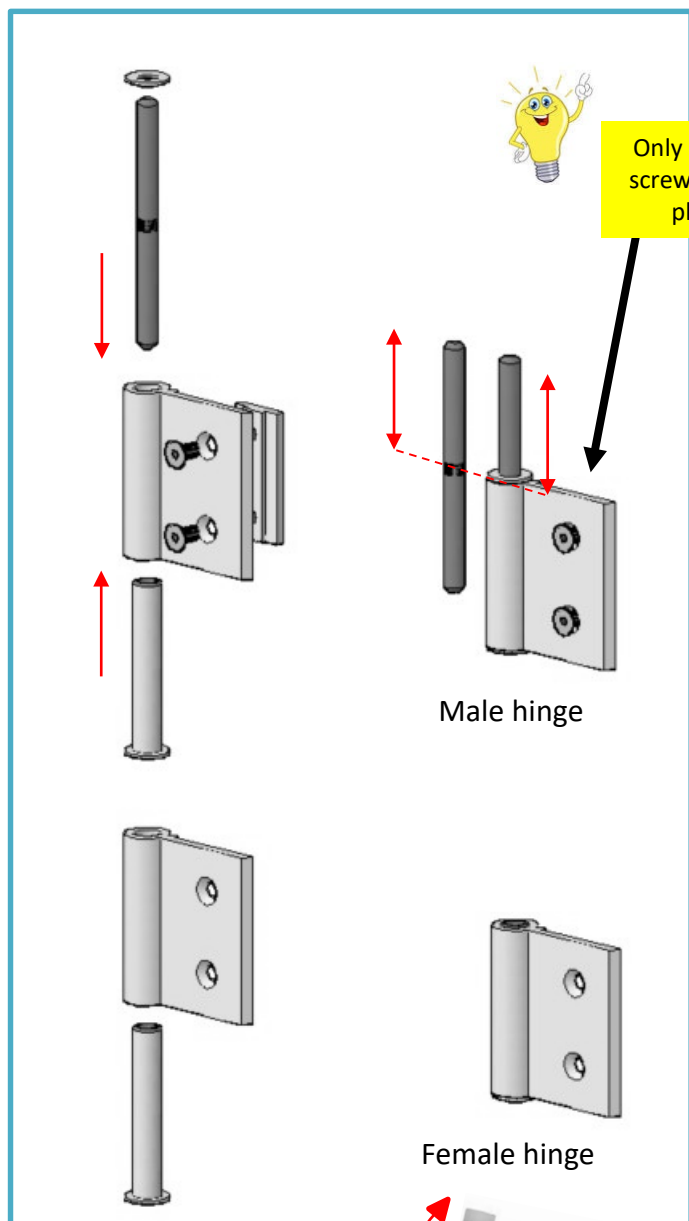


DOOR LEFT PUSHING

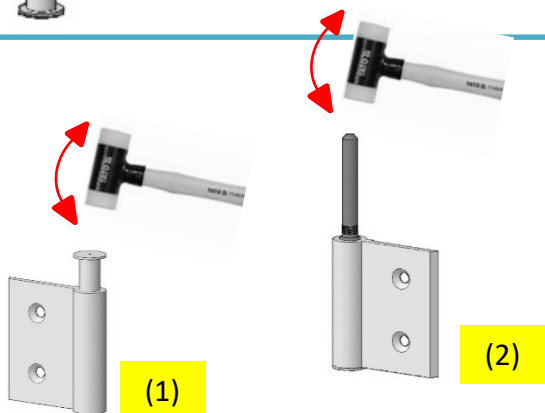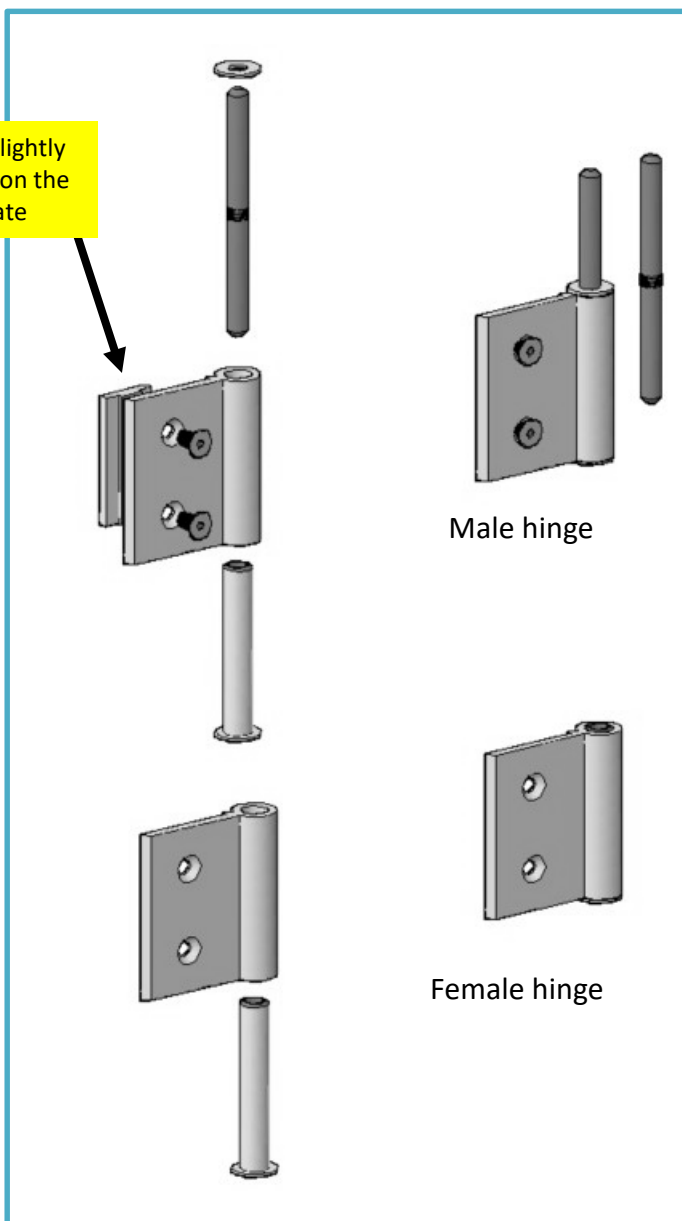


Engage the male hinges in the rebate of the frame

1

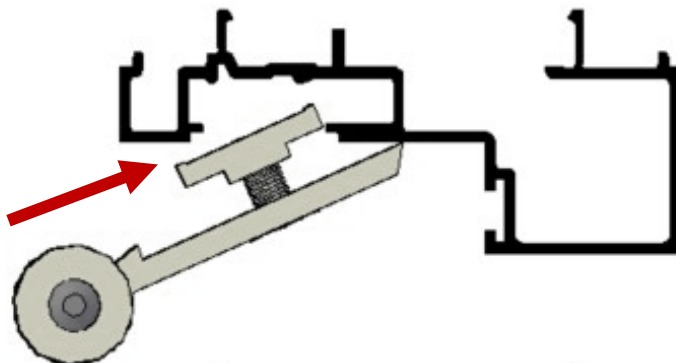


Insert the male hinge at an angle in the frame

2

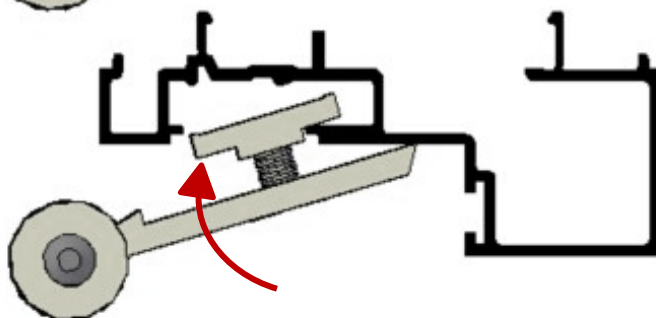


Keep going on putting the hinge and fold the hinge back onto the frame

3

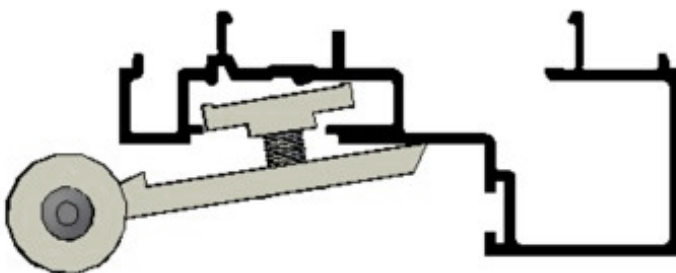


4

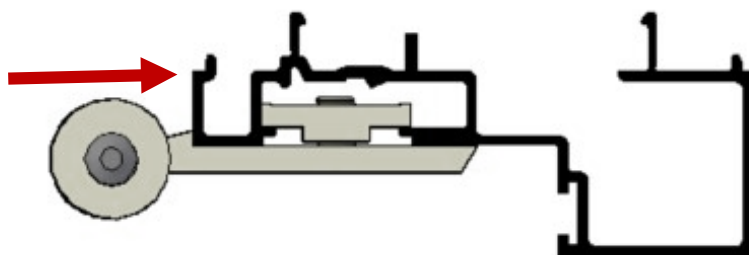

Push the hinge against the frame and moderately tighten the 2 screws of the plate

Attach the female hinges to the door according to the procedure on page 3

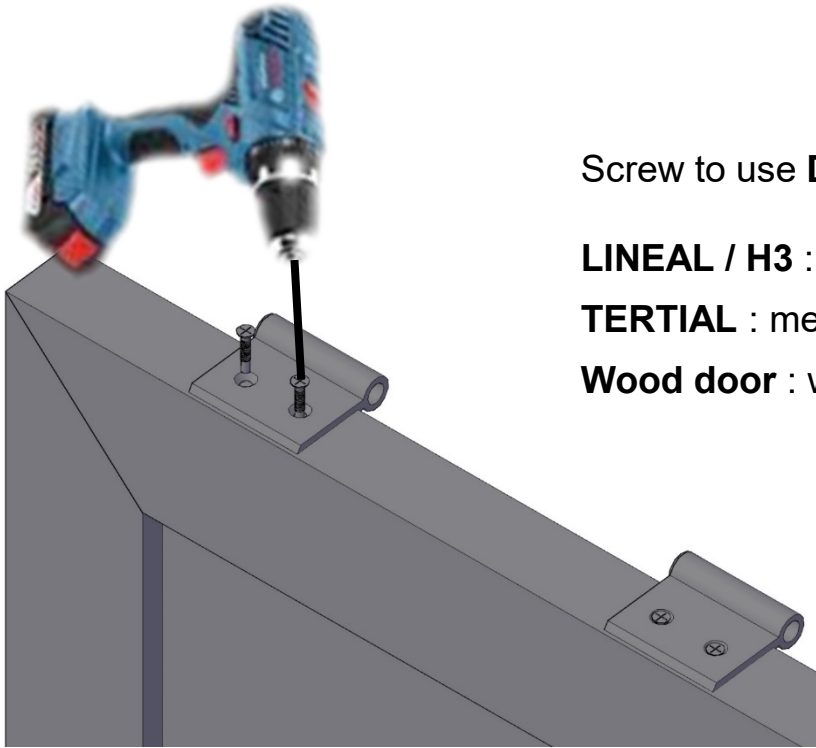



Screw to use **DOOR SIDE** :

LINEAL / H3 : self-drilling screw 25x4,8

TERTIAL : metal screw 10x5

Wood door : wood screw 30x5

Door hooking

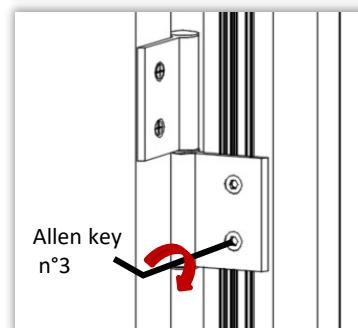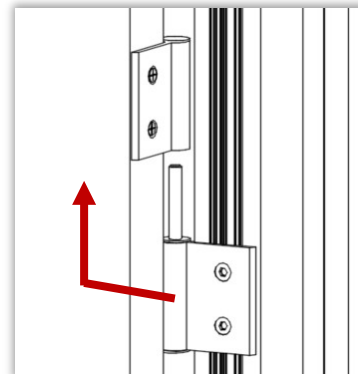

Attach the door case on the upright hinge side



Once all the settings have been made and verified:

Clearances between the door and the door case

- Clearance under the door
- correct door operation

IMPERATIVELY fix the door case on the upright above and below each male hinge.

No screwing required on the HT doorframe and on the H7BTDV doorframe

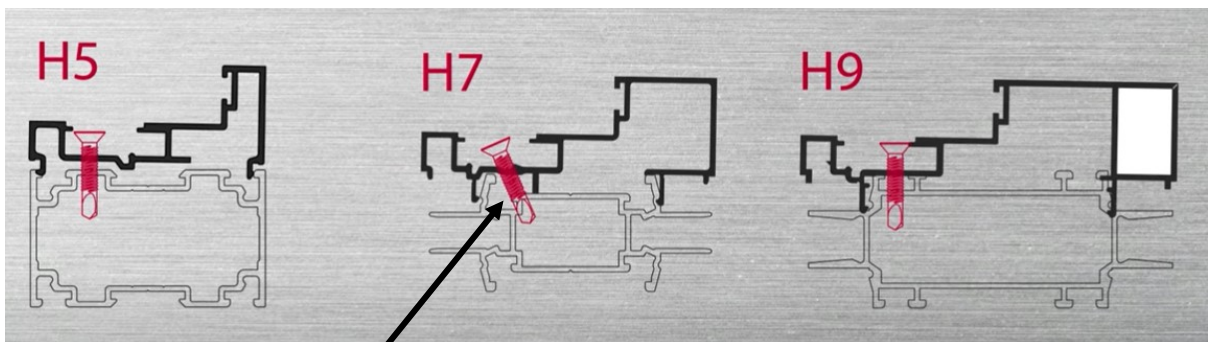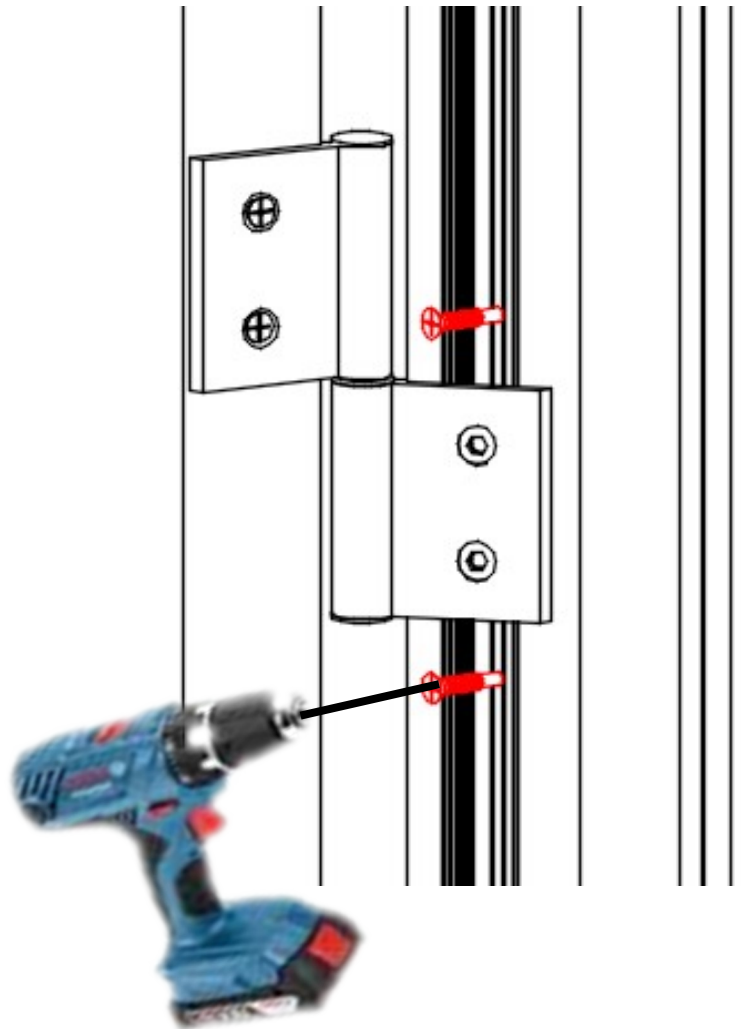

In the H7 partition: screw at an angle to prevent the screw from falling into the cover trim.